





1. Turn Power **OFF**

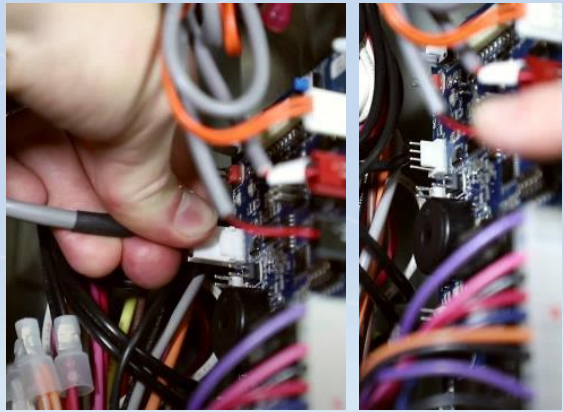

2. Open Control Box; Plug into White-4-Pin Connector

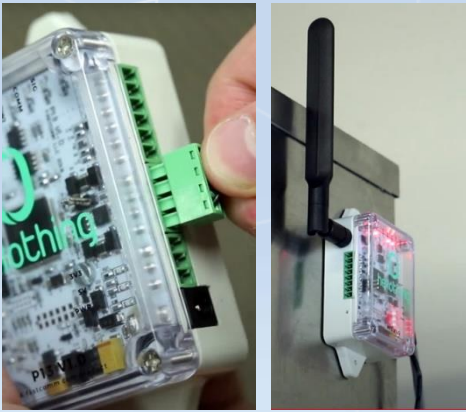


3. Plug 4-pin connector into gateway



4. Power On; Ensure *comm* LED is lit.



5. Capture AgentID and IMEI

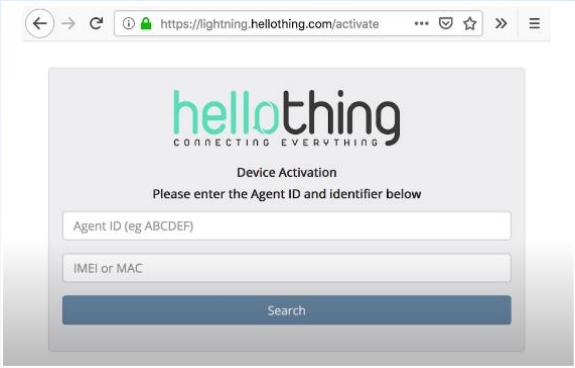

6. Activate